


Dual Toe-Kick Switch System

The Toe-Kick Switch System comes complete with all parts and mounting hardware.

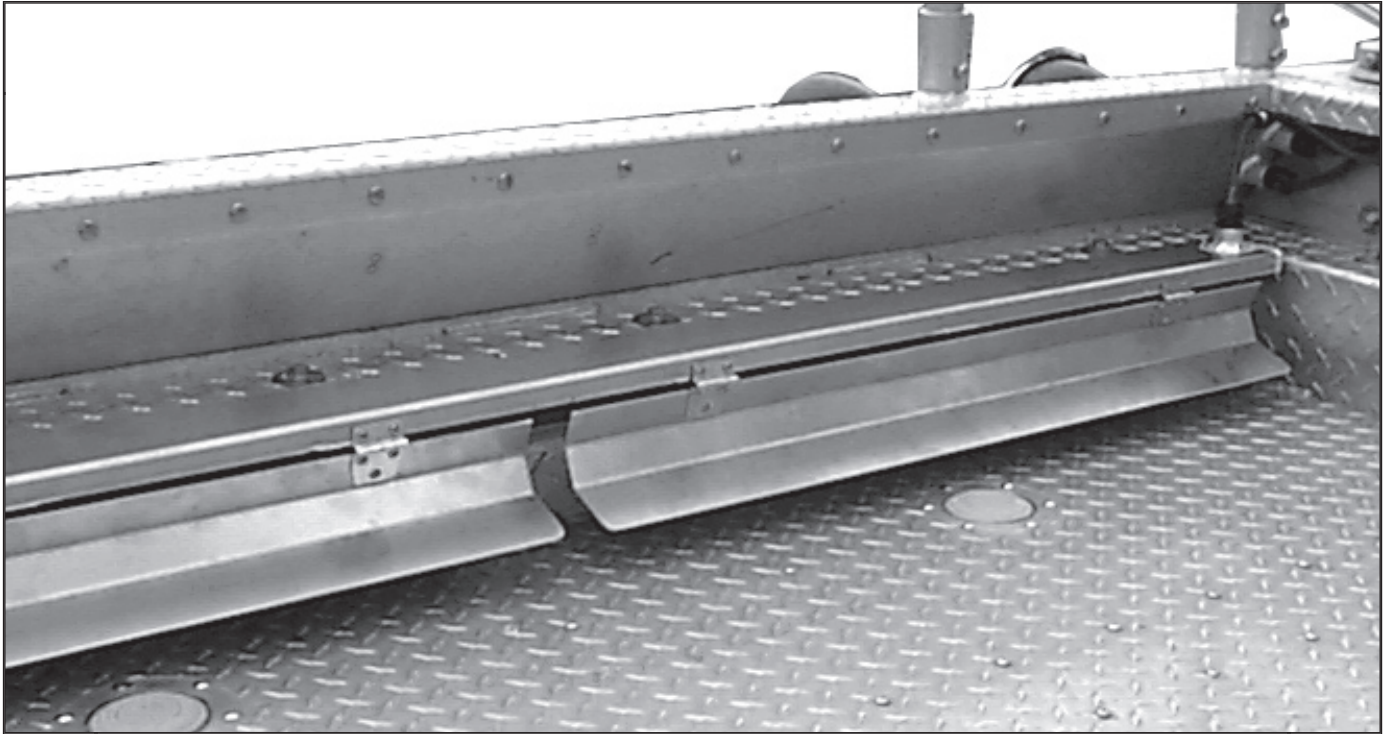

Step 1

- A. Using a 11/64 drill bit, drill holes where appropriate. The actual placement on the boat is not critical, except that it needs to be in the front.
- B. Install the kit with using the sheet metal screws provided in the installation kit.

Step 2

- A. Locate the cannon plug under the bow deck on the right (starboard) side of the boat.
- B. Unplug the cables and tie them up out of the way.

Step 3

- A. Locate the three cannon plugs on top of the bow deck.
- B. Unscrew the third cannon plug back from the bow and install the cannon plug from the new foot switch assembly.

Operation:

Find the toggle switch for changing between *separate* and *dual* mode configurations. This switch is located at the bow, on the port side of the new foot switch. To go back to the old foot switch, reverse the process. (In order for the toggle switch on the bow to operate the new system, you must keep the switch on the console in the *separate* position.)